











v prevádzke

v rozvázdači

v prevádzke

v rozvázdači

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
<div><div>PAVV-0016</div><div>RS5</div><div><div>DIO</div><div>D10</div><div>D11</div><div>D12</div><div>D13</div><div>D14</div><div>D15</div><div>D16</div><div>D17</div><div>IGND</div></div><div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div><div>19</div></div><div><div>14</div><div>14</div><div>14</div><div>14</div><div>13</div></div><div><div>11</div><div>11</div><div>11</div><div>11</div><div>14</div></div><div><div>1KA11.2</div><div>1KA12.2</div><div>1KA11.3</div><div>1KA12.3</div><div>1KM10</div></div><div><div>X10</div><div>FU50:2</div></div></div>																				
<div><div>v prevádzke</div><div>v rozvážači</div><div>v prevádzke</div><div>v rozvážači</div></div>																				
<div><div>Chod kotla K1</div><div>Chod kotla K2</div><div>Porucha K1</div><div>Porucha K2</div><div>Napájanie kotlov</div></div>																				
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
PAUFEX		Kreslil B. Piteľ		Vypracoval M. Ferčák		Kontroloval J. Piteľ		Obsah Rozvádzač RMS1			Dátum 10/2019		Zmena	DIGITÁLNE VSTUPY III			Kód HaHe 01	Číslo 1334-01		Listov: 19 List: 8

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
<div><div><div>Diras-Ak RS2</div><div>DO1</div><div><div><div>74</div><div>88</div><div>87</div><div>86</div><div>85</div><div>84</div><div>83</div><div>82</div><div>81</div><div>73</div></div><div>O1GND</div><div>DO7</div><div>DO6</div><div>DO5</div><div>DO4</div><div>DO3</div><div>DO2</div><div>DO1</div><div>DO0</div><div>O1+24V</div></div></div><div><div>X10</div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div>FU53:2</div></div><div><div>REM-08 PM2</div><div><div>72</div><div>18</div><div>17</div><div>16</div><div>15</div><div>14</div><div>13</div><div>12</div><div>11</div><div>71</div></div><div>GND</div><div>In7</div><div>In6</div><div>In5</div><div>In4</div><div>In3</div><div>In2</div><div>In1</div><div>In0</div><div>+24V</div></div><div>RDO0</div><div>Konfigurácia REM08: Spínanie voči +24V</div></div>																			
<div><div><div>Diras-Ak RS3</div><div>DO1</div><div><div><div>74</div><div>88</div><div>87</div><div>86</div><div>85</div><div>84</div><div>83</div><div>82</div><div>81</div><div>73</div></div><div>O1GND</div><div>DO7</div><div>DO6</div><div>DO5</div><div>DO4</div><div>DO3</div><div>DO2</div><div>DO1</div><div>DO0</div><div>O1+24V</div></div></div><div><div>X10</div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div>FU53:2</div></div><div><div>REM-08 PM3</div><div><div>72</div><div>18</div><div>17</div><div>16</div><div>15</div><div>14</div><div>13</div><div>12</div><div>11</div><div>71</div></div><div>GND</div><div>In7</div><div>In6</div><div>In5</div><div>In4</div><div>In3</div><div>In2</div><div>In1</div><div>In0</div><div>+24V</div></div><div>RDO0</div><div>Konfigurácia REM08: Spínanie voči +24V</div></div>																			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
PAUFEX	PREŠOV s.r.o.	Kreslil B. Piteľ		Vypracoval M. Ferčák		Kontroloval J. Piteľ		Obsah Rozvádzač RMS1				Dátum 10/2019	Zmena	Prepojenie DO-RDO			Kód HaHe 01.	Číslo 1334-01	Listov: 19 List: 9

X10

REM-08
PM2

72

18

17

16

15

14

13

12

11

71

GND

In7

In6

In5

In4

In3

In2

In1

In0

+24V

FU53:2

RDO0

Konfigurácia REM08: Spínanie voči +24V

Diras-Ak
RS3

DO1

74

88

87

86

85

84

83

82

81

73

O1 GND

DO7

DO6

DO5

DO4

DO3

DO2

DO1

DO0

O1 +24V

X10

REM-08
PM3

72

18

17

16

15

14

13

12

11

71

GND

In7

In6

In5

In4

In3

In2

In1

In0

+24V

FU53:2

RDO0

Konfigurácia REM08: Spínanie voči +24V



















